

1. After set OPUSER XP CD at CD drive of your PC, You will find installation windows with automatically starting. You should set OPUSER License Floppy disk at in FD drive. of your PC, But If you install DEMO version, don't need to set floppy disk.



2. If you open other application, Close other windows. Click **Yes(Y)**.

3. Click **Yes(Y)**. (Oleaut32.dll)



4. Click **Yes(Y)**. (MSVCRT.dll)



5. Click **Yes(Y)**. (Version.dll)



6. For OPUSER product installation, you should check to insert License floppy disk, and check **Install Opuser(License Disk required)**. For OPUSER DEMO version, check **Install Opuser Evaluation**. And Click **Next**.



7. For OPUSER product installation, you should select FD drive of License floppy disk. For OPUSER DEMO version, Select CD drive for OPUSER CD. Click **Next**.



8. After check or set the OPUSER install path, Click **Next**.



9. Click **Finish**.



10. Select your **Language (English or Japanese)**. After check the space of your PC, Click **Continue**.



11. Start to install automatically.

12. After installed, Click **O K**. Automatically be added at your PC Windows program.



13. Click **Exit**. Should remove CD and License disk. Click **YES(Y)**.



You should reboot your windows PC.

14. After reboot PC, You can start OPUSER XP to select OPUSER-main.

15. Auto Help function be set at initial. If you want to stop Auto Help function, you remove the check at View (pull down) menu.



◆ Uninstall OPUSER

If you need to change your PC, You need to uninstall the license from PC.

1. Select **Opuser-Uninstaller**



2. You should set OPUSER license floppy disk at your PC floppy drive, and should click **Uninstal**.



3. Click **Yes(Y)**.



4. Select the drive of license disk. Click **OK**.



5. Start to uninstall.

6. Click **Exit**. You finish uninstallation.

